

# Velcro Linking Pad Instructions




You will need a soft plastic or wooden mallet

1. Once you have unpacked your divan, stand the two divan halves up on their ends and line them up side by side so that the feet brackets are clearly visible.



2. Take the pair of velcro pads and join them together

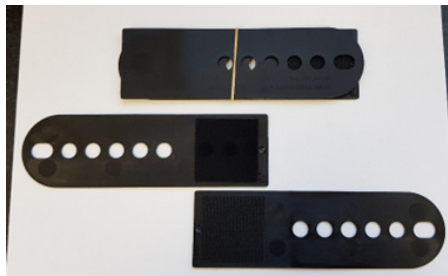


**Sleepeeze**

ESTABLISHED 1924

# Velcro Linking Pad Instructions

3. Line the velcro linking pads up to the socket brackets so they can be seen clearly through the holes in the linking pad

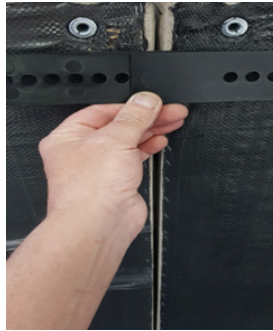

4. Insert the castors/glides through the pad and into the sockets. Gently tap them into place with the soft mallet. If fitting legs, screw them into place.



5. Repeat on the bottom sockets to fit the feet. With help lower the linked base on to its feet.

**Sleepeeze**

ESTABLISHED 1924